

Sound Module Manual:

Button Functions:

N – No Record: The device is not recording.



R – Record: The device is ready to record, hold down the button and speak clearly.

MIC – Microphone: This is where the microphone is located.

Note: this is where you speak when recording.



P – Play: Playback mode is active.



Locking & Unlocking the Recorder:

Lock the Recorder: Hold down the button for 10 seconds to lock. The recorder will not record while locked.

Unlock the Recorder: Hold down the button for 11 seconds to unlock. The recorder can now record again.

Charging:

The rechargeable recording module can be charged using a USB-C cable.